

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]					Refer to page
			× 1,000 km	1	4	8	12	
		MONTH	× 1,000 mi	0.6	2.5	5	7.5	
* FUEL LINE					I	I	I	—
* THROTTLE OPERATION					I	I	I	107
AIR CLEANER		NOTE (2)		EVERY 16,000 km (10,000 mi) R				95
CRANKCASE BREATHER		NOTE (3)			C	C	C	96
SPARK PLUG						R		103
* VALVE CLEARANCE				I	I	I	I	—
ENGINE OIL				R		R		97
* ENGINE OIL STRAINER SCREEN							C	101
* ENGINE IDLE SPEED				I	I	I	I	—
RADIATOR COOLANT		NOTE (4)				I		33
* COOLING SYSTEM						I		—

ITEM	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	ODOMETER READING [NOTE (1)]					Refer to page
			× 1,000 km	1	4	8	12	
			× 1,000 mi	0.6	2.5	5	7.5	
		MONTH			6	12	18	
* DRIVE BELT				EVERY 8,000 km (5,000 mi) I, EVERY 24,000 km (15,000 mi) R				—
* FINAL DRIVE OIL		NOTE (4)						—
* BATTERY				I	I	I	I	111
BRAKE FLUID		NOTE (4)			I	I	I	28
BRAKE SHOES/PADS WEAR					I	I	I	109, 110
BRAKE SYSTEM				I	I	I	I	27, 109, 110
* BRAKE LIGHT SWITCH					I	I	I	—
* BRAKE LOCK OPERATION				I	I	I	I	—
* HEADLIGHT AIM					I	I	I	65
** CLUTCH SHOES WEAR						I		—
SIDE STAND					I	I	I	108
* SUSPENSION					I	I	I	107
* NUTS, BOLTS, FASTENERS				I		I		—
** WHEELS/TYRES					I	I	I	—
** STEERING HEAD BEARINGS				I			I	—